


PowerBastards.com

“0” Gauge Alternator Wire Upgrade Kit Installation Instructions

PowerBastards.com
Fitzall 220+ AMP Alternator

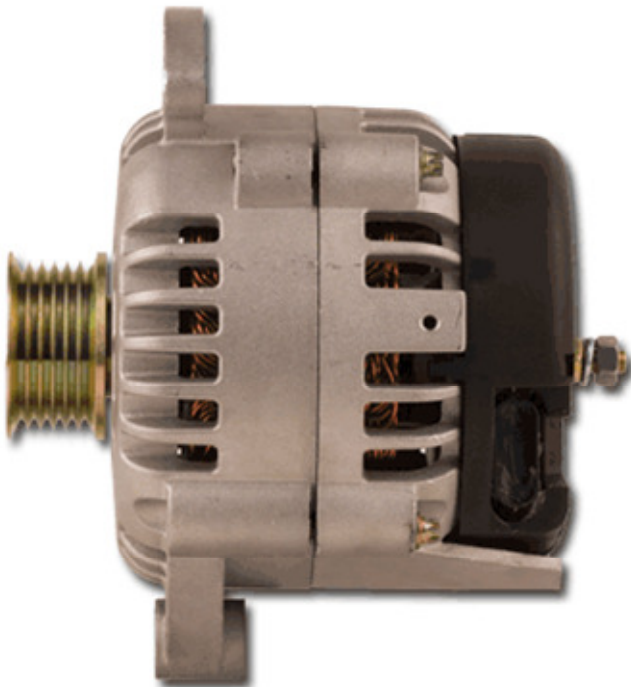

250AMP Fuse

Easy Install

1. Always disconnect positive lead at battery while working on vehicle electrical system!
2. Cut supplied 0 gauge cable for fuse installation.
3. Strip wire and install each end into fuse holder. Tighten with hex tool.
4. Attach one end of 0 gauge cable to back of alternator charge post and the other to the positive (RED) post of your vehicles battery.
5. Always 'add' this wiring upgrade kit to your existing factory wiring. 'Stack' the wires on top of the main charge post.
6. DO NOT remove silicone from plug on the rear of the Fitzall 220+ Alternator. This unit is a self exciting alternator that requires only the main charge wire to be installed.
7. No other wiring is necessary, small factory plug in the rear of the alternator is not used.

www.PowerBastards.com
Tel: 321-214-1561 USA
mike@powerbastards.com